

WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding your product, this warranty, or would like to obtain warranty service, please visit our website at www.holmesproducts.com or call 1-800-546-5637 and a convenient service center address will be provided to you.

In Canada

If you have any questions regarding your product, this warranty, or would like to obtain warranty service, please visit our website at www.holmesproducts.com or call 1-800-546-5637 and a convenient service center address will be provided to you.

WARRANTY INFORMATION

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

© 2007 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved.
Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

9100010009810

HAWF204607EM1

Printed In China

Holmes®

Owner's Guide

HAWF2046



Twin Window Fan

with Comfort Control Thermostat

 
PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids. Plug the appliance directly into a 120V AC electrical outlet.
4. **WARNING:** To reduce the risk of fire or electrical shock, DO NOT use this fan with any solid-state speed control device.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
7. Avoid contact with moving parts.
8. DO NOT operate in the presence of explosives and/or flammable fumes.
9. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
10. DO NOT operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. DO NOT use outdoors.
13. DO NOT let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. DO NOT operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use only and not for commercial or industrial applications.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

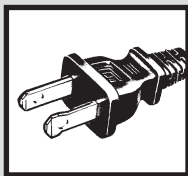

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

FEATURES - OPERATIONS CLEANING/MAINTENANCE

WINDOW FAN INSTALLATION

 
 
Your window fan is designed to be used with a window screen in place. To install your window fan, simply position your fan on the edge of the window sill and close the window sash so that the window rests in the track on the top of the fan.

OPERATING INSTRUCTIONS

Plug the fan into a 120V AC electrical outlet.

Fan speed control settings = Off, High, Med, Low.

Electrically Reversible Air Flow: Your fan blades are electrically reversible so that you can change the direction of the air flow by sliding the switches.

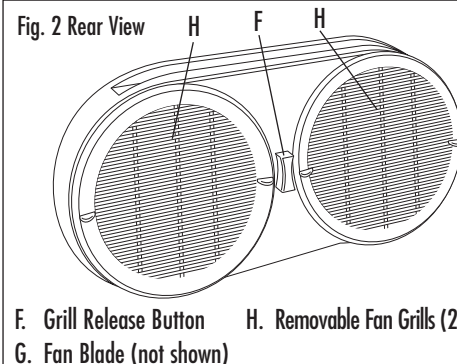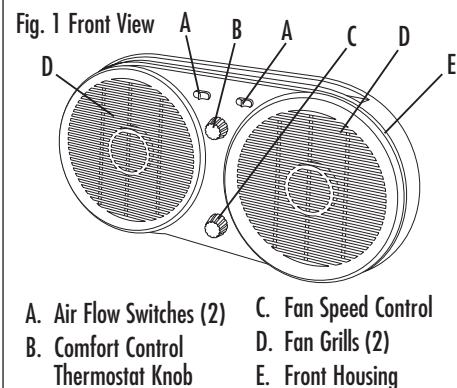

- To pull in fresh air from the outside, slide both Air Flow Switches (A) to the Intake position.
- To exhaust the inside air out, slide both Air Flow Switches to the Exhaust position.
- To circulate fresh air into your home and stale air out, slide one of the Air Flow Switches to the Intake position and the other Air Flow Switch to the Exhaust position.

COMFORT CONTROL THERMOSTAT

Your fan is equipped with a Comfort Control Thermostat that you can program to turn the fan ON and OFF automatically.

- Plug the fan into a 120V AC electrical outlet.
- For the fan to turn ON automatically, you must set the thermostat to a temperature higher than the current room temperature. If the fan power is on but the fan blade(s) aren't moving, turn the Comfort Control Thermostat dial to the right until the fan blade(s) spin.
- To set your desired comfort level, run the fan until the temperature in your room is comfortable. Slowly turn the Comfort Control Thermostat dial to the left until the fan blades turn off. Your fan will maintain this temperature.

IMPORTANT: If you want your fan to run continuously, turn the Comfort Control Thermostat dial all the way to the right.

CLEANING/MAINTENANCE INSTRUCTIONS

 
 
 
Follow these instructions to correctly and safely care for your fan.

- Always unplug the fan before cleaning or disassembling.
- Be sure to clean your fan with a soft cloth moistened with a mild soap solution.
- Do not allow water to drip on or enter into the fan housing.
- Do not use gasoline, thinner, or benzene as a cleaner.
- Lightly run a vacuum cleaner nozzle over the fan grill to remove any dust or dirt that may have accumulated.

CLEANING/MAINTENANCE TROUBLESHOOTING

Fan Blade Cleaning

- Unplug the fan and remove the fan from the window.
- While pressing the grill release button, turn the removable fan grills counter-clockwise (see Fig. 3).
- Remove the grills (see Fig. 4).
- Use a soft cloth moistened with a mild soap solution to clean the fan blades (see Fig. 5).
- Place the grills back onto the fan and turn them clockwise until they click into place. Make sure the grills are secured, prior to replacing the fan in your window and beginning operation.

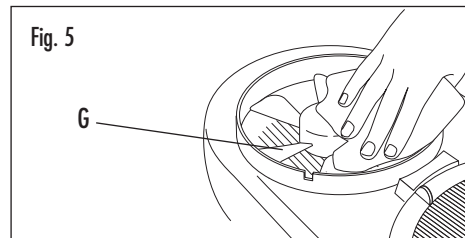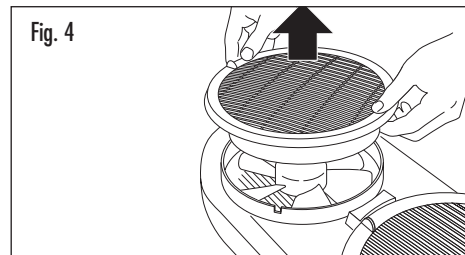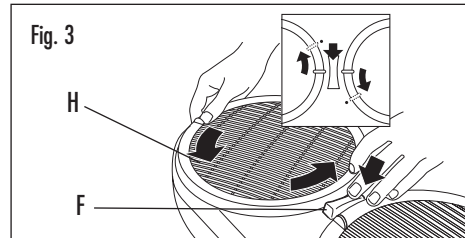

FAN STORAGE

- Store your fan in the original box or an appropriately sized box.
- Protect the fan head from dust.
- Store your fan in a dry location.

If you have any questions regarding your product or would like to learn more about other Holmes® products, please contact our Consumer Service Department at 1-800-546-5637 or visit our website at www.holmesproducts.com

TROUBLESHOOTING GUIDE

Issue	Potential Cause	Potential Solution
Air does not seem to be blowing in properly.	Air Flow Switches set to Exhaust rather than Intake.	Adjust Air Flow Switches to Intake.
Fan will not operate even though I am turning the Fan Speed Control knob.	Fan is not plugged in.	Plug in the power cord into a 120 V AC Outlet. Be sure the Speed Control knob is in the off position prior to plugging in the Fan.
Fan is not secure in the window and moves during operation.	Fan may not be set in the window properly.	Ensure that the bottom edge of the window sash fits securely into the groove along the top of the Fan. Close the sash completely on top of the window so it is secure. Please refer to the Installation portion of the manual for more details.